


Changing the Transponder Frequency for AMC-6:

- **Double click** the round satellite icon  located in the system tray to open the **Setup4PC** application.
- Click the **Transponder Management** button.
- Change the **Start and End Frequency** from **12100** to **11860** located in the Search & Scan section to the right.
- In the Transponder section to the left, **double click** on the **12100 MHz: H/L** line to open the **Edit Transponder** window.
- **Change** the Transponder from **12100** to **11860**.
- Click the **Tune** button located at the bottom of the window and the **Signal Quality** will then return.
- Click the **OK** button to close the **Edit Transponder** window.
- Click the **Close** button to exit the **Transponder Management** window.
- Click the **Close** button to exit the **Setup4PC** application